

HH400

Handheld 2D Area-Imaging Scanner

Quick Start Guide




HH400-ENUS-QS REVA 04/16

Note: Refer to your user's guide for information about cleaning your device.


Getting Started

Turn off computer's power before connecting the scanner, then power up the computer once the scanner is fully connected.

 
Power Supply Assembly (if included)

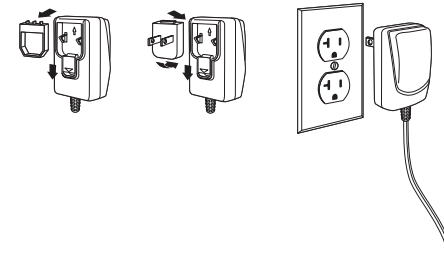

Connecting the Scanner USB

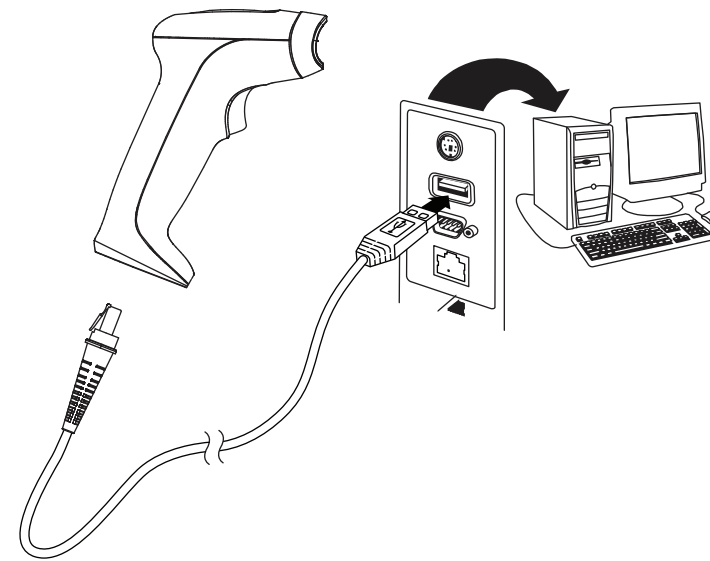 

RS232 Serial Port:

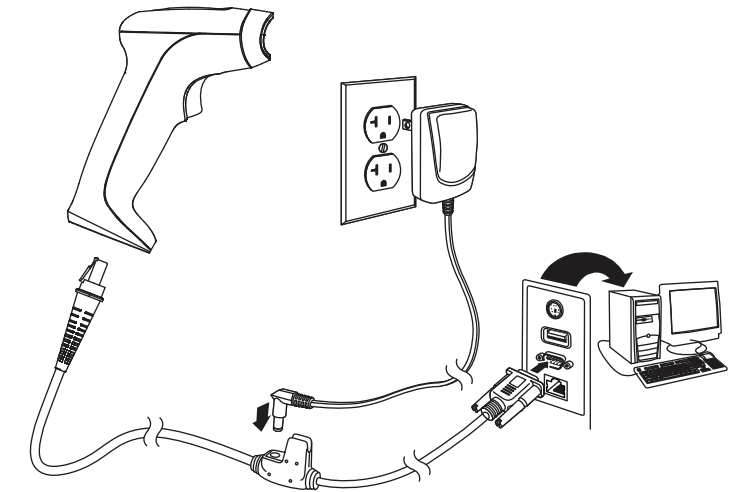 

Reading Techniques

The view finder projects an aiming beam that should be centered over the bar code, but it can be positioned in any direction for a good read.

Hold the scanner over the bar code and center the aiming beam on the barcode.

The aiming beam is smaller when the scanner is closer to the code and larger when it is farther from the code. Hold the scanner close to smaller bar codes, and farther away from large bar codes to get a proper read. If the bar code is highly reflective (e.g., laminated), you may need to tilt the scanner at an angle so the bar code can be scanned.

Standard Product Defaults

The following bar code resets all standard product default settings.



Standard Product Defaults

Note: Default setting do not change product interface type.
Ex: Keep USB interface no change after default setting.

Programing the interface

HH400 support interface type of RS232 and USB HID. Change cable and scan one of the following barcode to program your interface.

(1) RS232 COM port

Scan following barcode to program interface to RS232 COM Port with RS232 cable.



RS232 COM port

(2) USB Keyboard port

Scan following barcode to program interface to USB keyboard port with USB cable.



USB Keyboard

Enter/Change line setting

(1) Add Enter



(2) Cancel Enter



(3) Add change line



(4) Cancel change line



Technical Assistance

Contact information for technical support, product service, and repair can be found at www.honeywellaidc.com.

User Documentation

For localized versions of this document, and to download the User's Guide, go to www.honeywellaidc.com.

Limited Warranty

For warranty information, go to www.honeywellaidc.com and click Resources> Warranty.

Patents


For patent information, see www.hsmpats.com.

Disclaimer

Honeywell International Inc. ("HII") reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult HII to determine whether any such changes have been made. The information in this publication does not represent a commitment on the part of HII. HII shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from the furnishing, performance, or use of this material. HII disclaims all responsibility for the selection and use of software and/or hardware to achieve intended results.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of HII.

Copyright 2015-2016 Honeywell International Inc. All rights reserved.
Web Address: www.honeywellaidc.com

 产品中有害物质的名称及含量 (Names and Content of Hazardous Substances in the Product)						
部件名称 (Parts Name)	有害物质 (Hazardous Substances)					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
二维影像式阅读器 (2D Imager)	o	o	o	o	o	o
印刷电路板 (PCB)	x	o	o	o	o	o
外壳 (Housing)	o	o	o	o	o	o
连线 (Cables)	o	o	o	o	o	o

本表格依据 SJ/T11364 的规定编制。(The table is created by SJ/T11364 requirement.)

o: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T26572 标准规定的限量要求以下。(Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in China's GB/T26572.)

x: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572 标准规定的限量要求。(Indicates that this hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in China's GB/T26572.)